

1/13

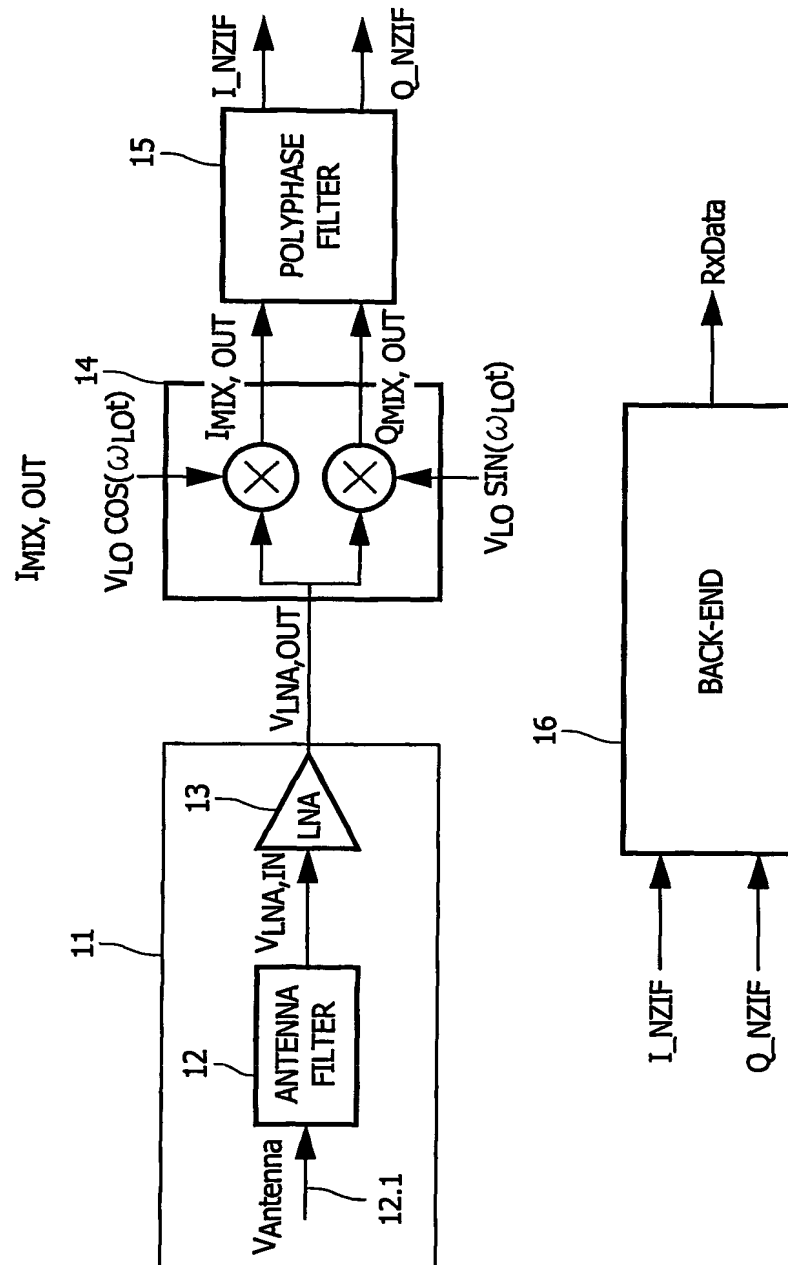


FIG.1

2/13

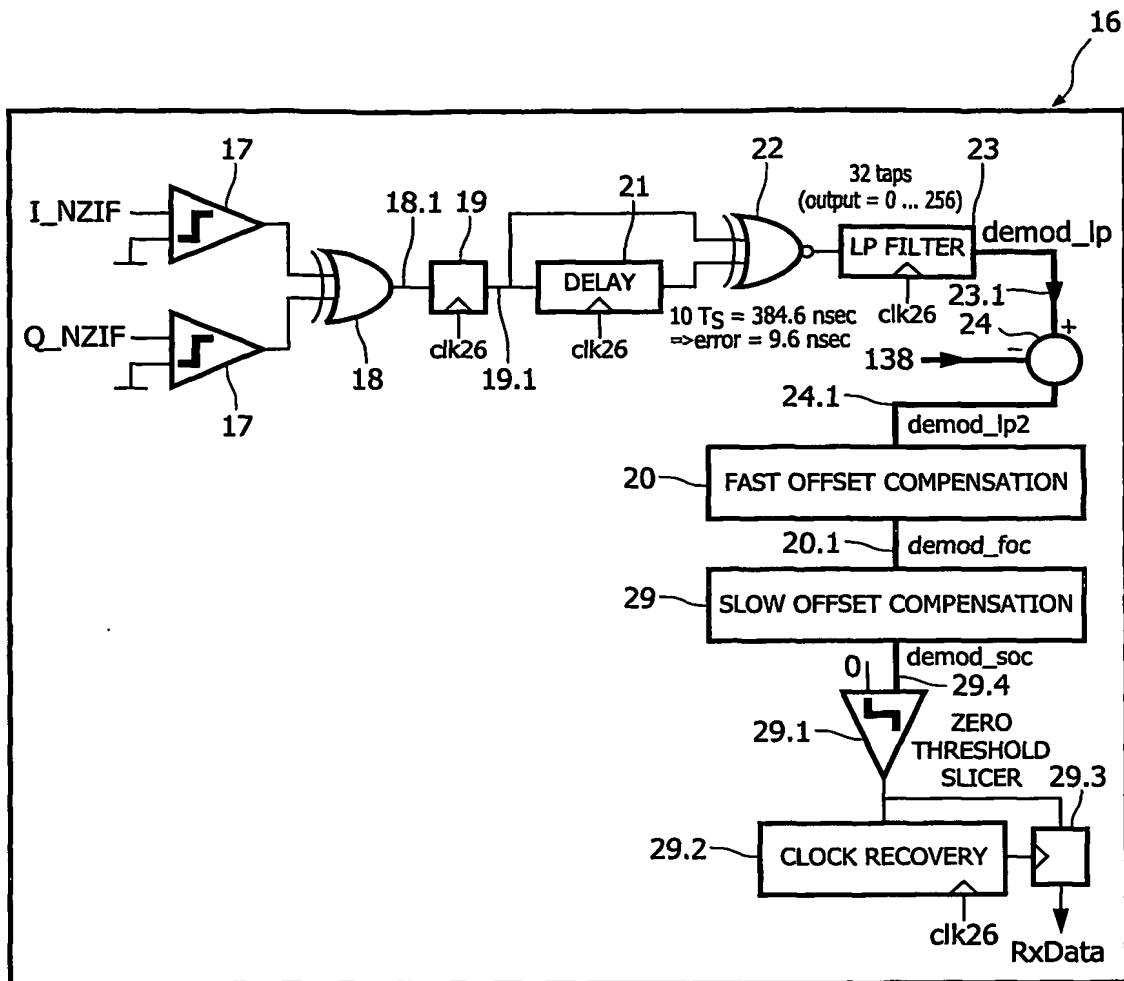


FIG.2

3/13

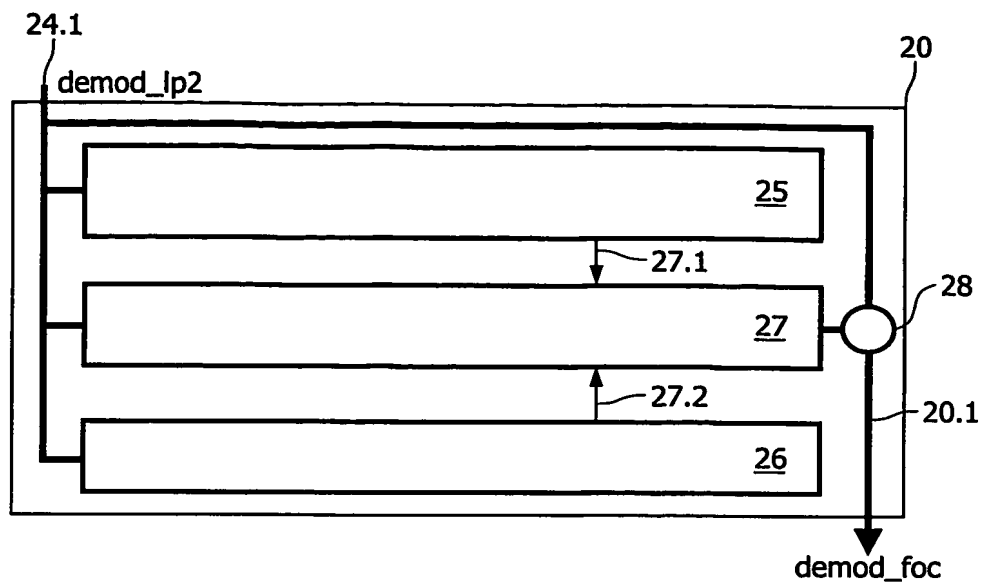


FIG.3A

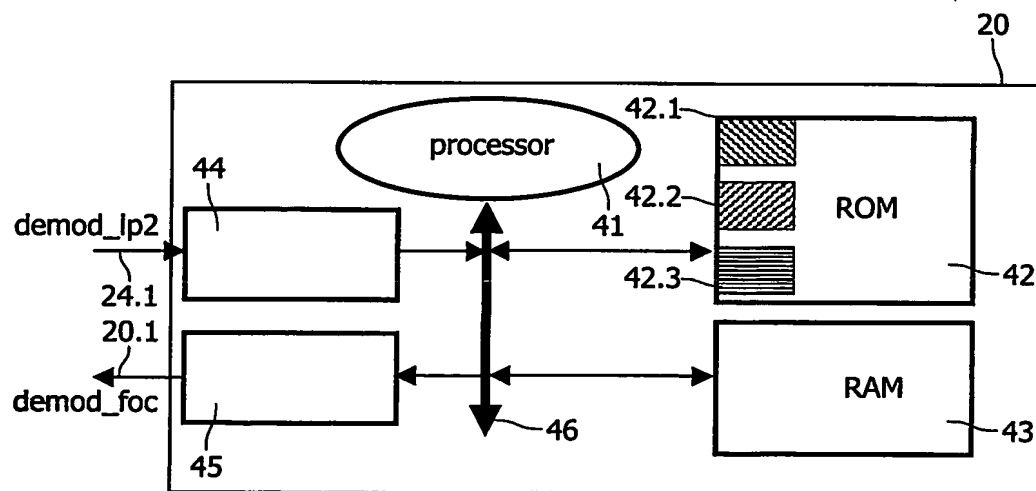


FIG.3B

4/13

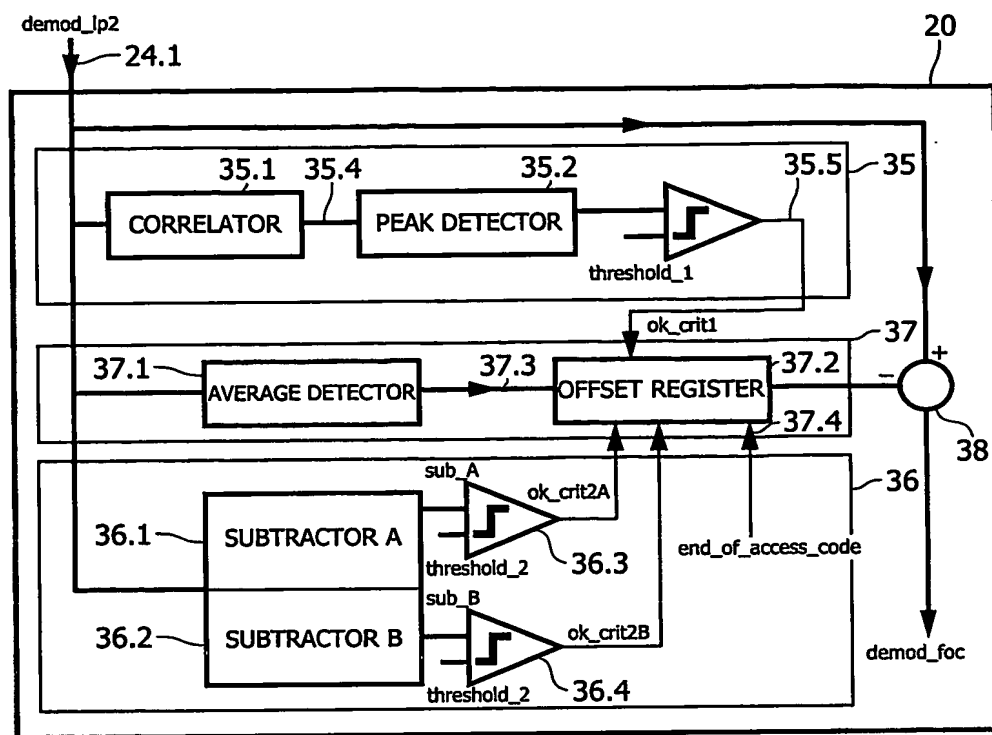


FIG. 4

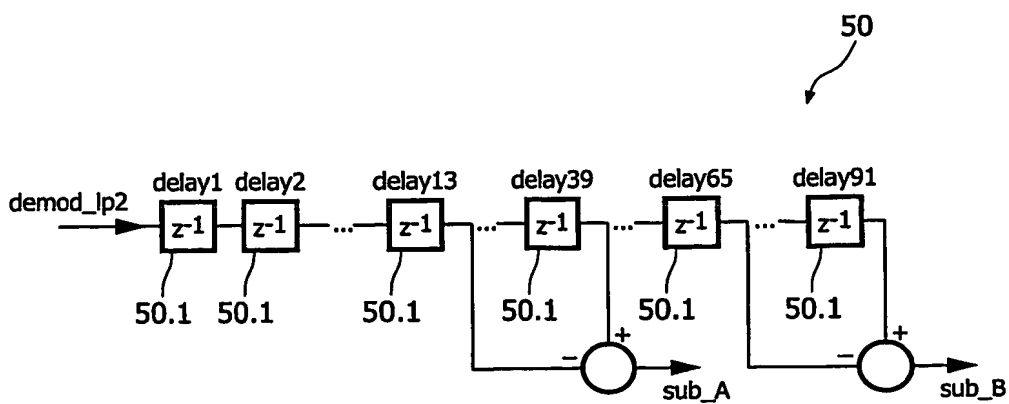


FIG. 5

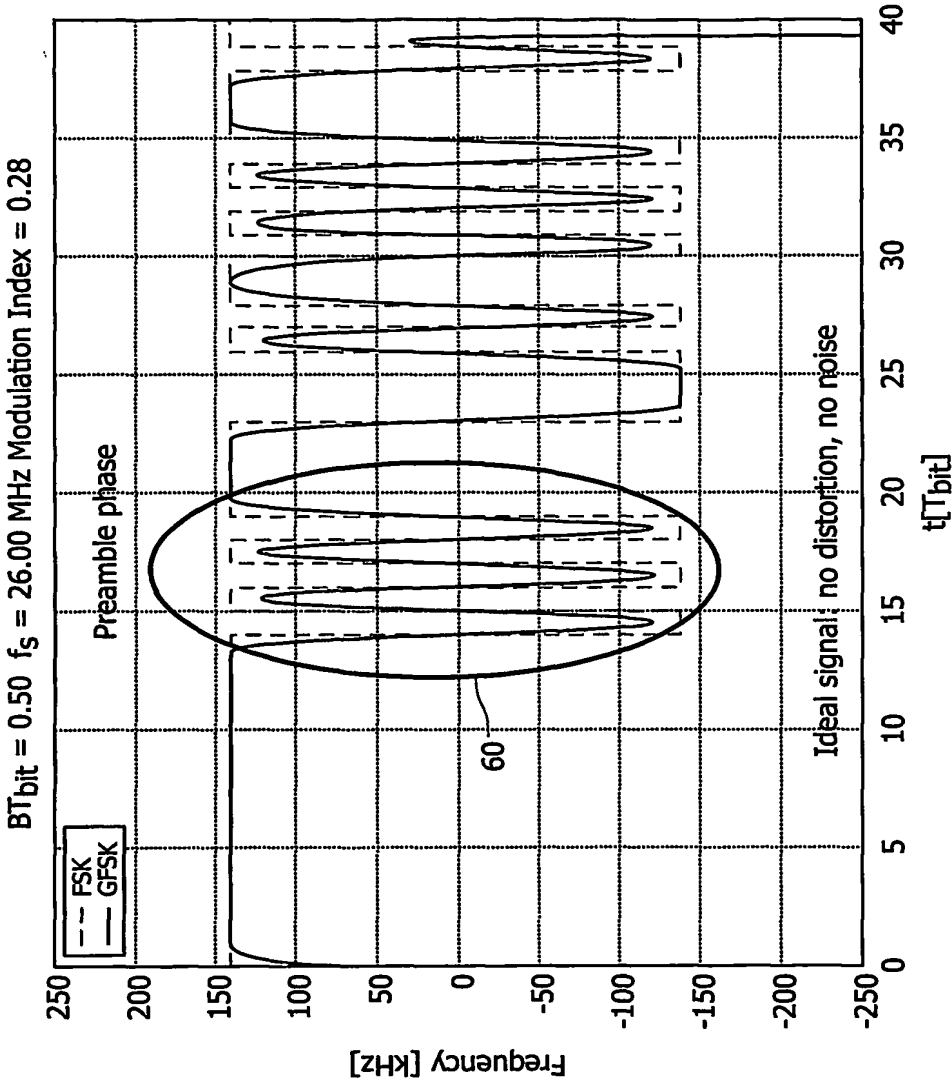


FIG.6

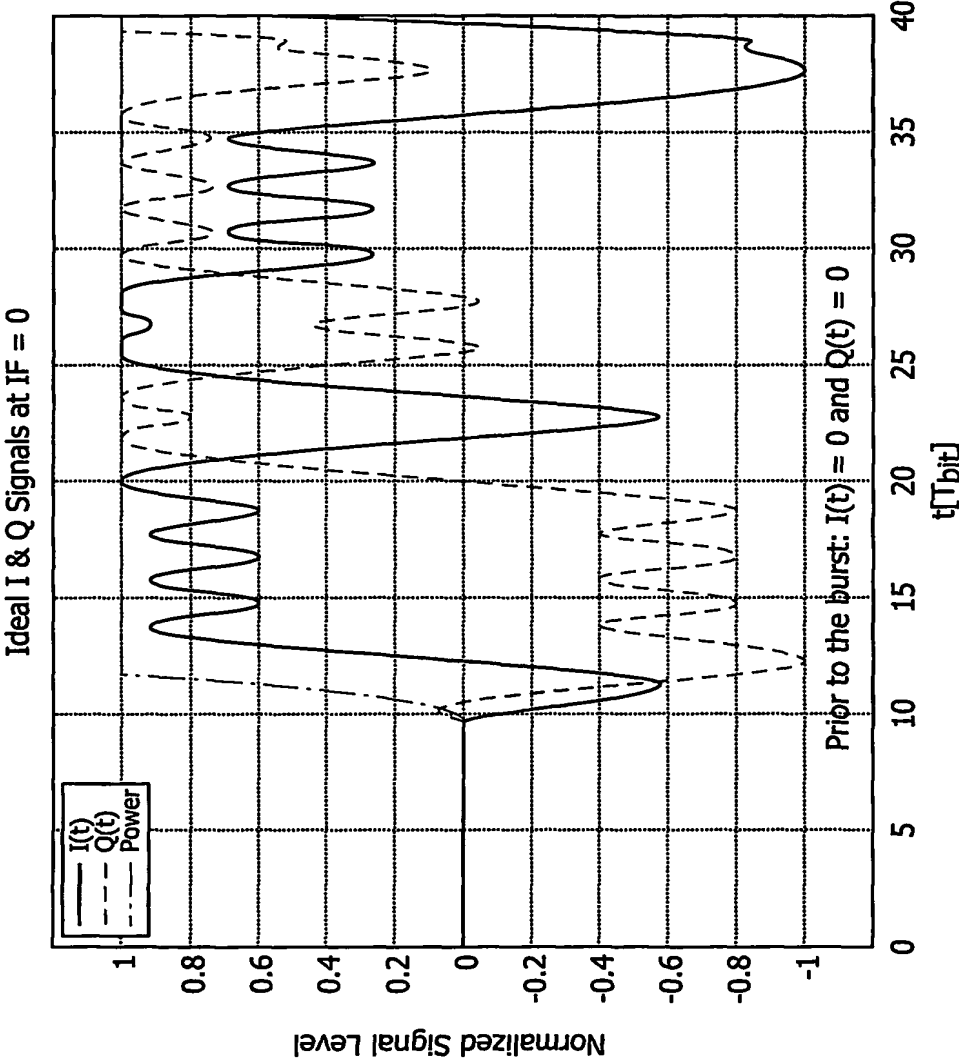


FIG.7

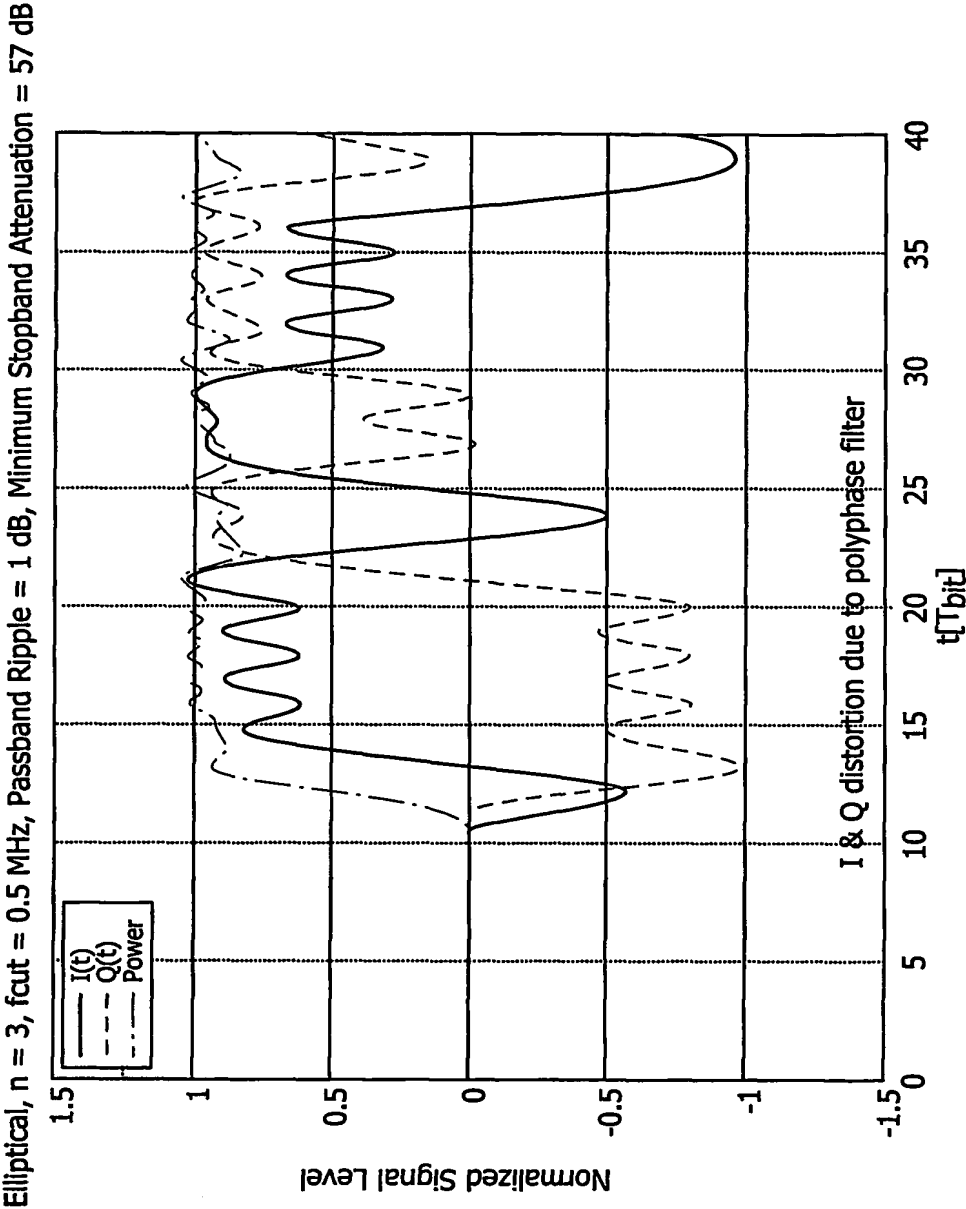


FIG.8

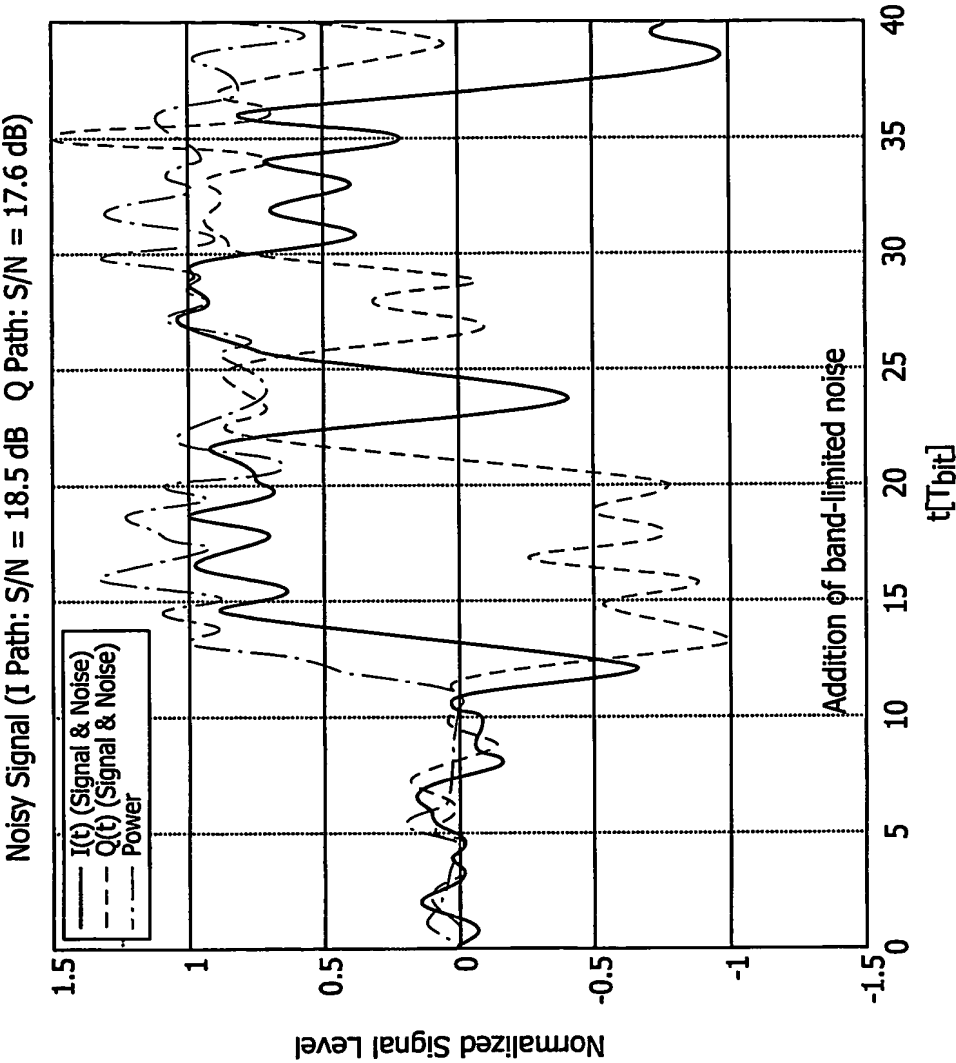


FIG.9

Example with a frequency offset error of 150 kHz
(Nominal center frequency = IF = 1000 kHz)

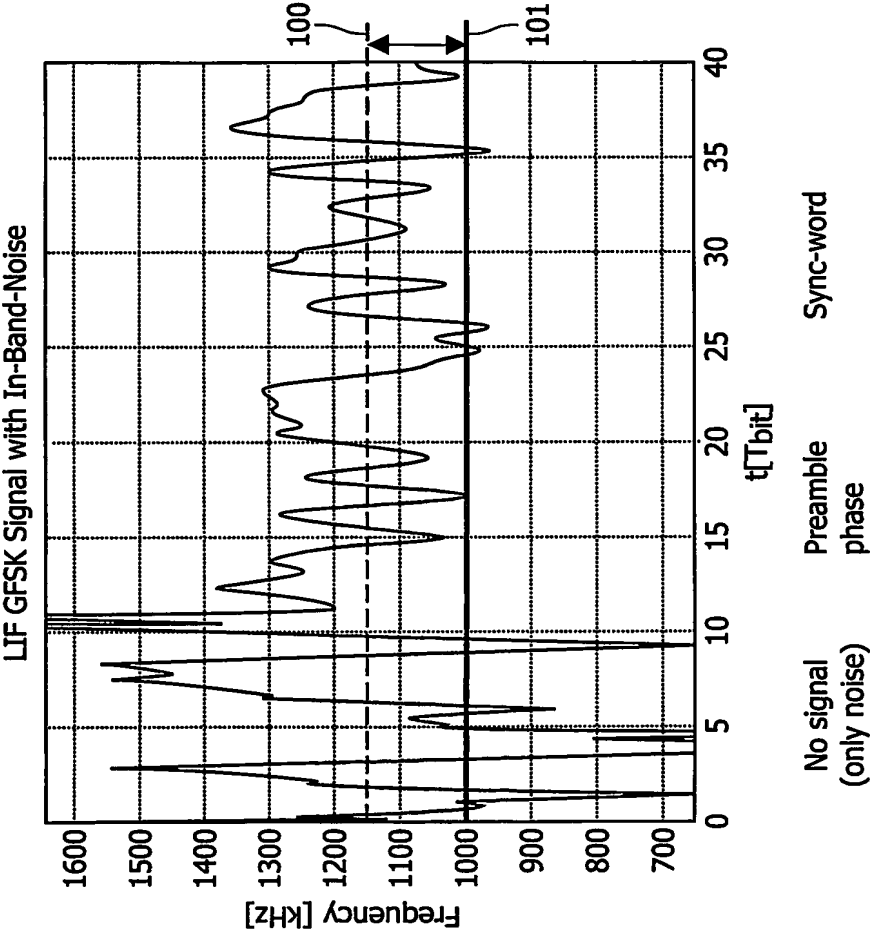


FIG.10

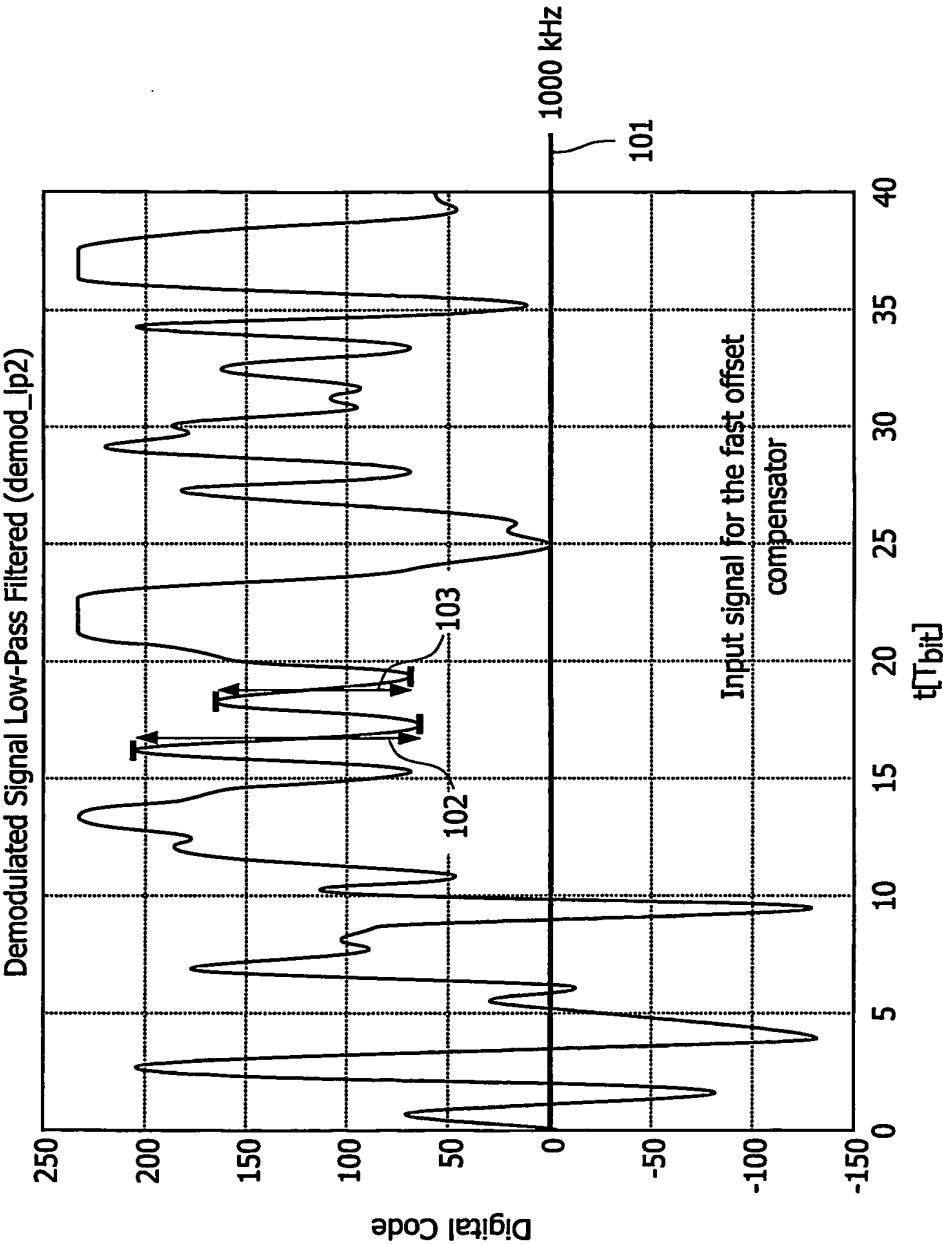


FIG.11

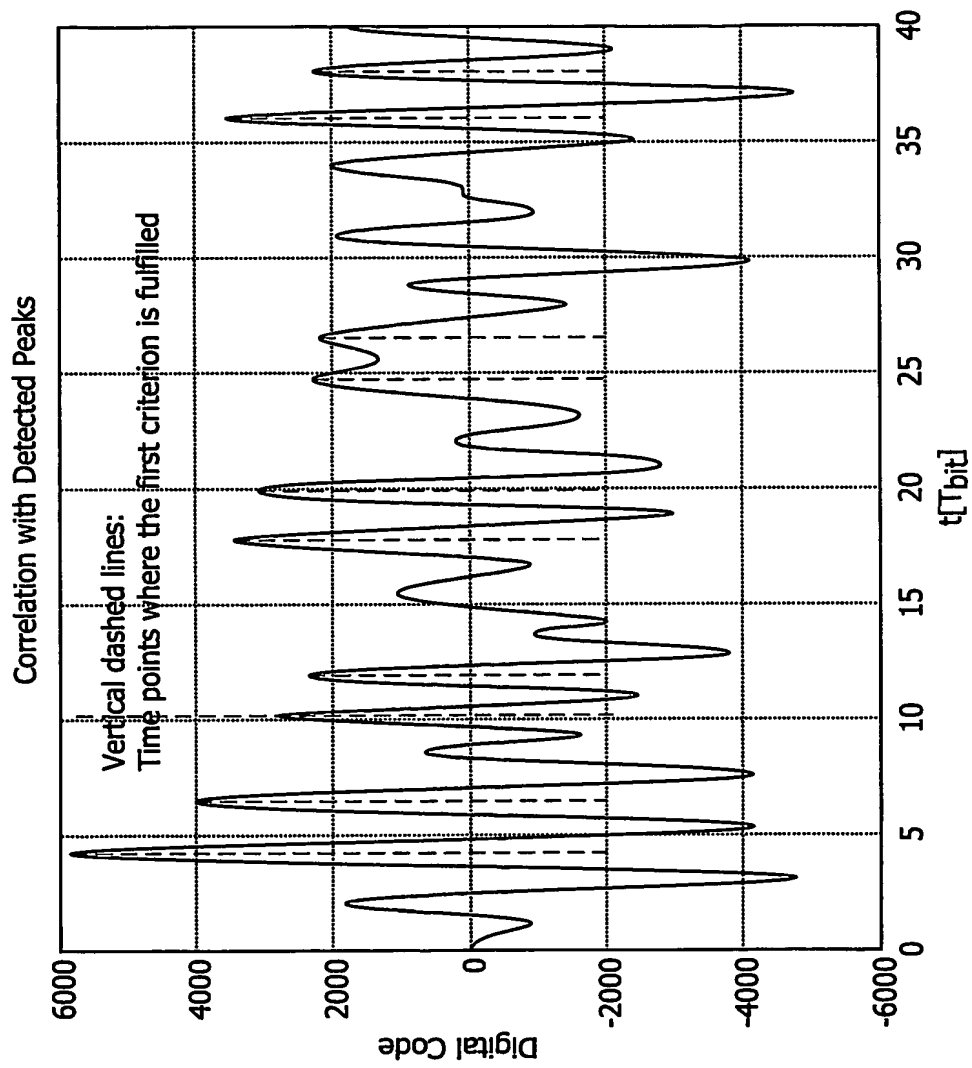


FIG.12

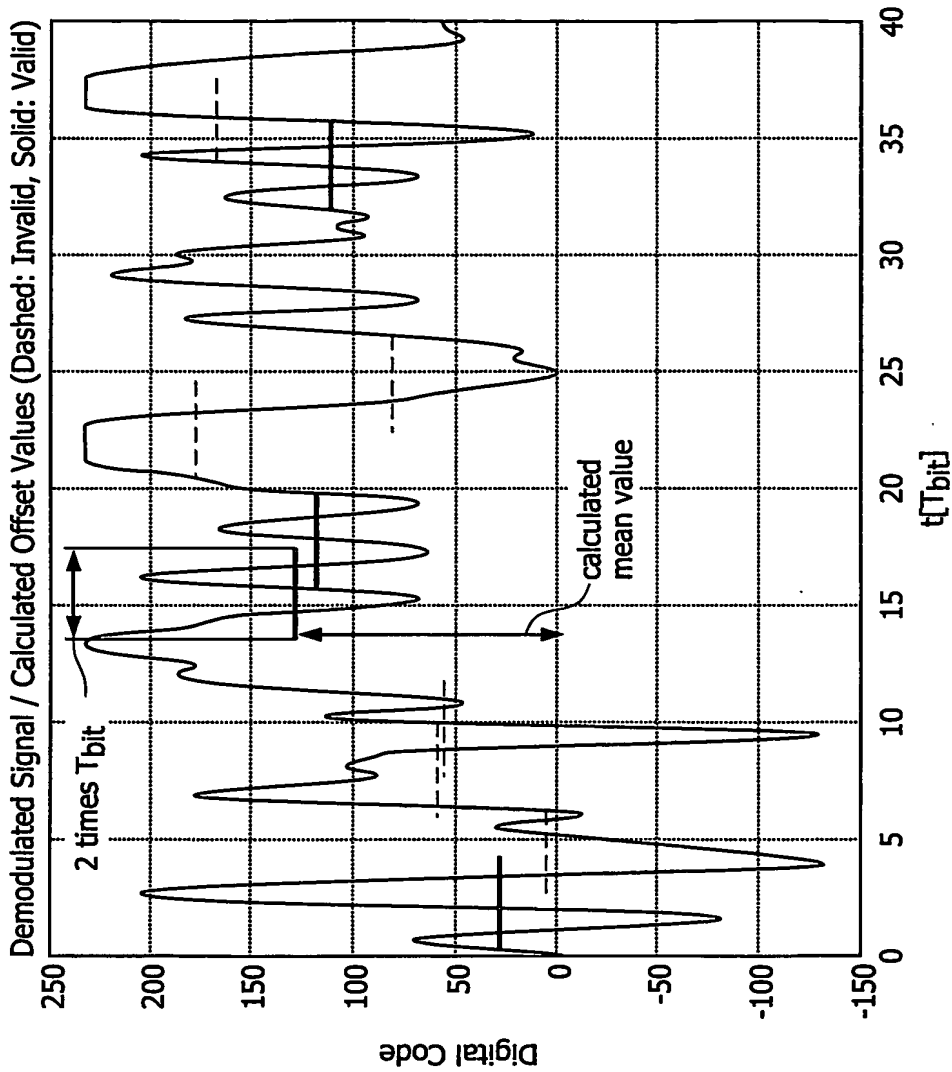


FIG.13

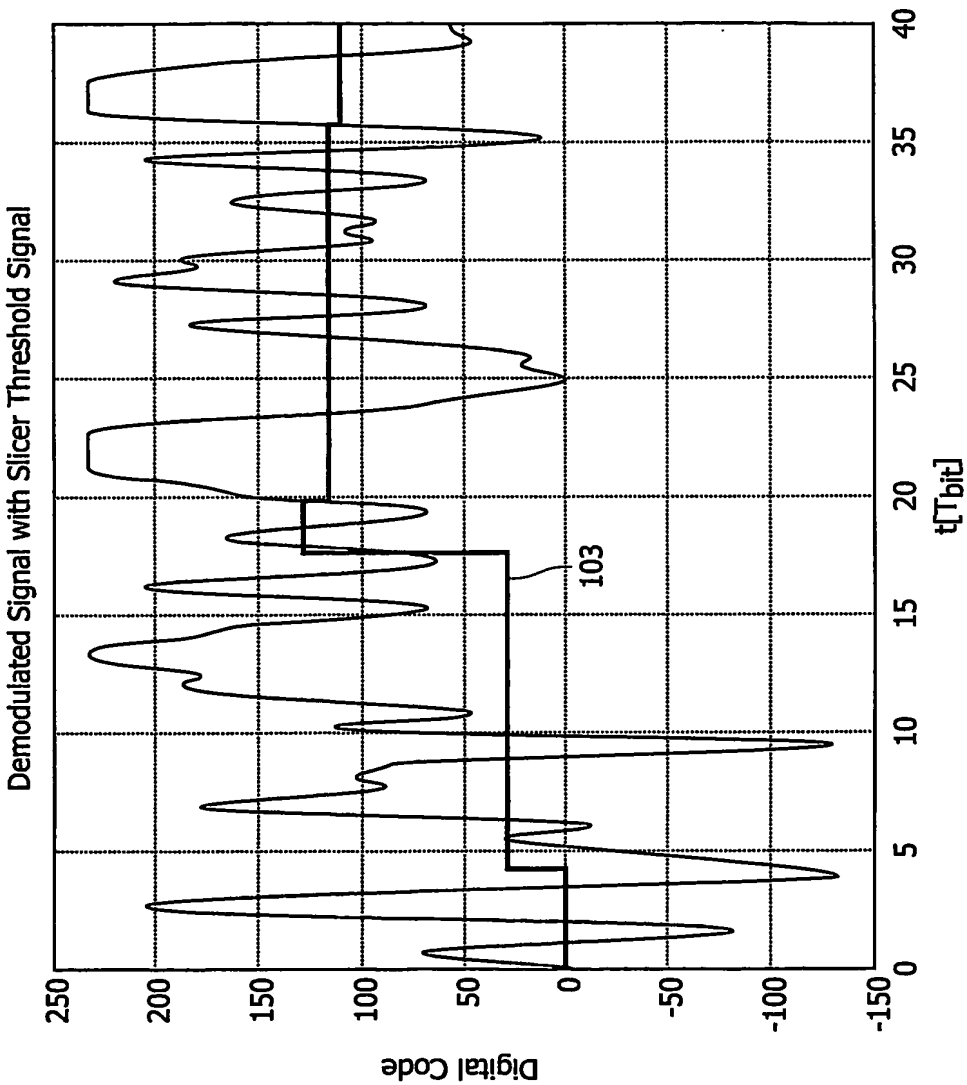


FIG.14